


**Use Small female
 Sockets A31995-ND or
 A31990TR or A32007TR
 And install from this end
 (the threaded side)**

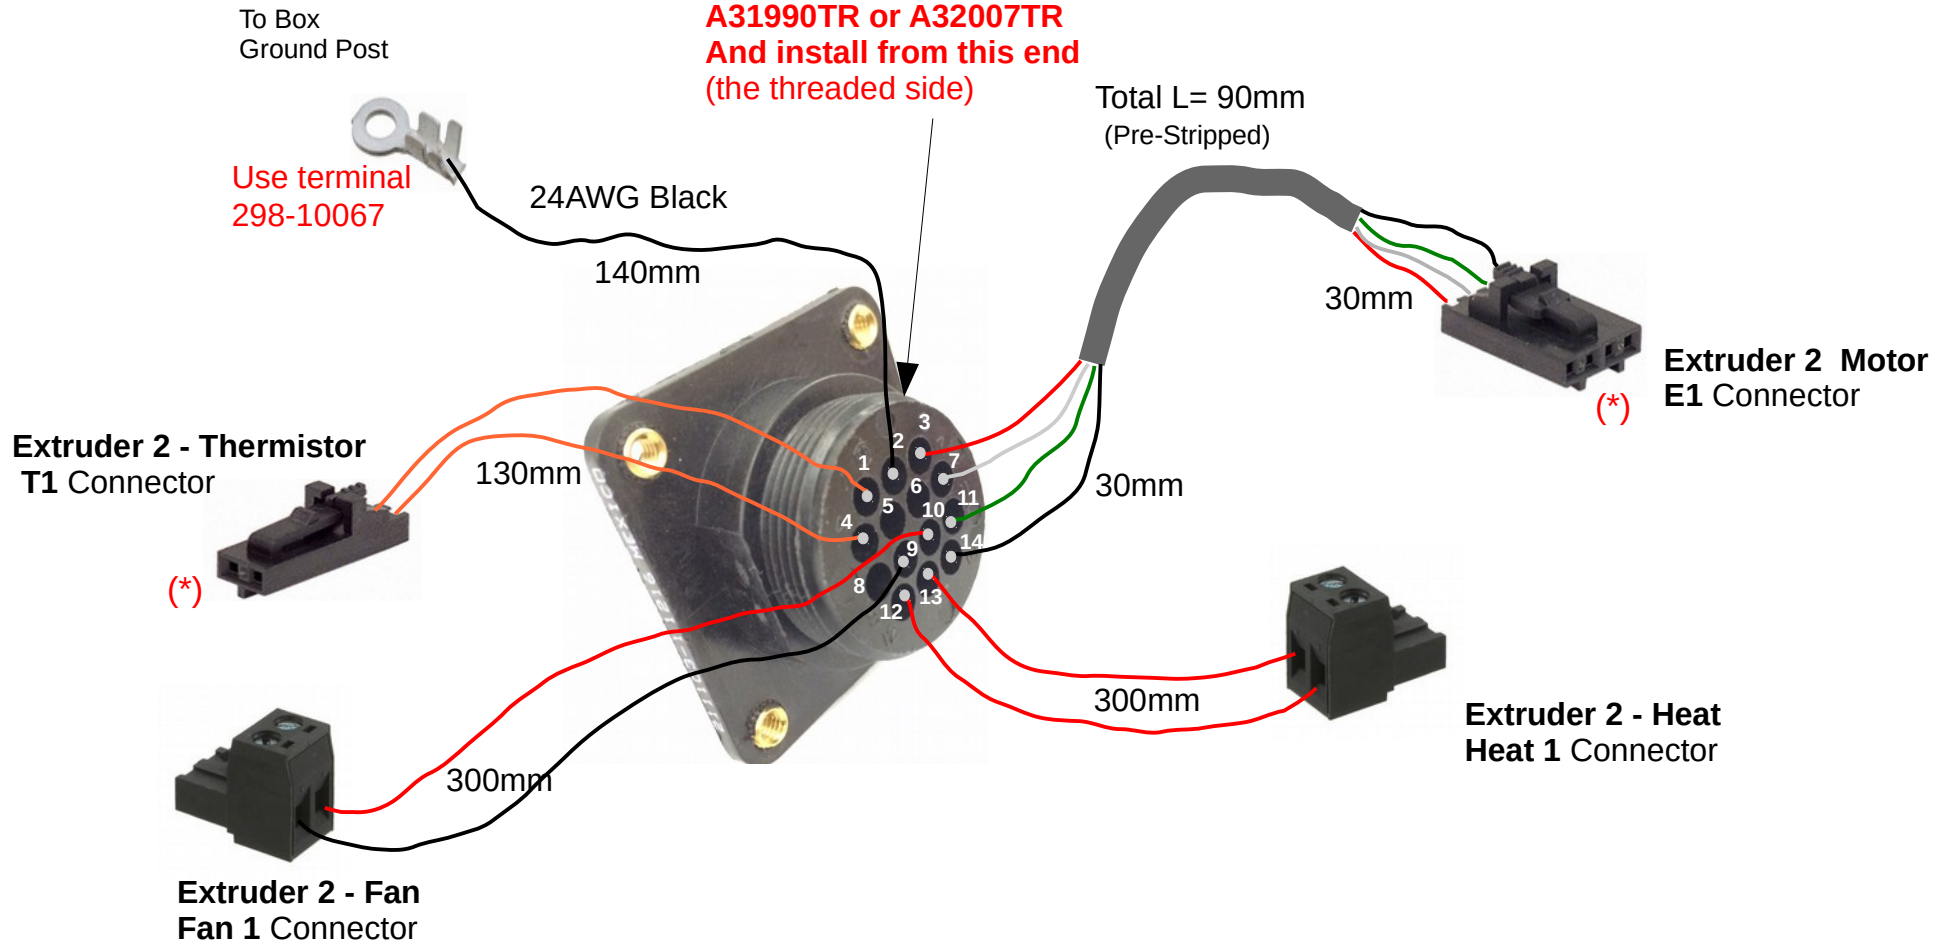

(*) use female socket, WM2510-ND

DRAWN BY		C. HUYNH		2/2014				
TITLE		TAZ 4.0						
Build Process Instruction		SIZE	DWG NO.		SHEET		REV.	